Hinged Screen Door Hardware

INSTALLATION INSTRUCTIONS

IMPORTANT Read thoroughly before beginning. Failure to install as recommended will void any warranty, express or implied.

Tools Required:

- Phillips screwdriver
- Drill
- 3/32" drill bit

1 Hardware Installation:


A. Set the interior lever in place.


B. Rotate the exterior lever to the proper position, then set in place.

C. From the inside, secure using the two latch screws.

D. Hold the two levers together and tighten the set screw on the exterior lever with the hex key.

Note: If installing on a double door, skip to Step 3 below.

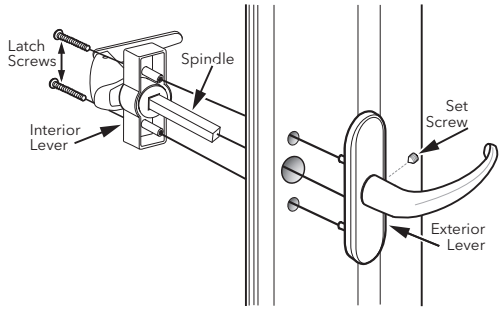




#6-32 x 1-1/4" Latch Screw


2 Single Door Strike Installation:

A. Close the door and position the latch strike behind the latch bolt as shown.

B. Mark and drill the strike holes (using a 3/32" drill bit) in the center of the slotted holes.

C. Install two #6 x 3/4" strike screws. Adjust the strike for proper operation. Shims are included if it is necessary to build out the strike.

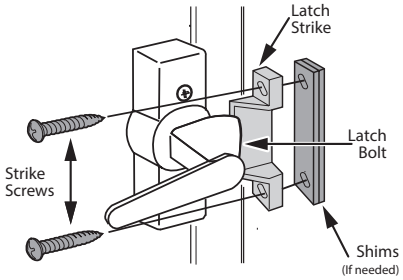



#6 x 3/4" Strike Screw

Parts Included:


- Hardware bag (use this strike and set of screws)


3 Double Door Strike Installation:

A. Close the door and position the latch strike behind the latch bolt as shown.

B. Mark and drill the strike holes (using a 3/32" drill bit) in the center of the slotted holes.

C. Install two #6 x 1/2" strike screws. Adjust the strike for proper operation.

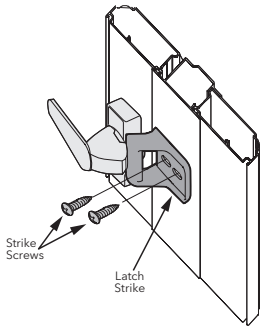



#6 x 1/2" Strike Screw

© 2026

GIF-000000507-1 Part Number: 80WQ0000